

interference has been rectified; the product can once again be used for its intended purpose. The device may have to be switched-on again.

Statutory instructions on battery disposal

Batteries must not dispose as of household waste. The law requires that you, as consumer, return the waste batteries either to public collection points in your town or village or to any outlet selling batteries of the same kind.

Note:



Batteries are marked as follows:

Li = Battery contains Lithium

Al = Battery contains Alkali

Mn = Battery contains Manganese

CR 2032 (Li); AA (Al, Mn); AAA (Al, Mn)

Disposal of old electrical and electronic equipment



This symbol on the product or on its packaging indicates that this product shall not be treating as household waste. Instead, it shall be hand over to the applicable collection point for recycling of electrical and electronic equipment. For more detailed information's about recycling please contact your local city office, your household waste disposal service or the shop where you purchased the product.

With kind regards

ADE (GmbH & Co.)



Guarantee card – 2 years warranty for the Digital Kitchen Scale

• Sender

• Reason for complaint

• Date of purchase

Please return this guarantee card together with the receipt to your retailer.

ADE

Model Anja / KE 854 Instruction Manual



Contents

1. Preparation for use.....	Page 2
2. Handling.....	Page 2
3. Error Messages.....	Page 3
4. Technical Data.....	Page 3
5. Warranty.....	Page 3



TARE
FUNCTION



TEMPERATURE



WEIGHT



AUTO OFF




BATTERY
LEVEL

Thank you for your decision to purchase this high quality product of ADE Germany. You bought a scale featuring highest technical standard and well-proven quality. Please read this instruction manual prior to the start-up and keep it careful to have this information on hand whenever needed.

1. Preparation for use

Activate / Replace batteries:

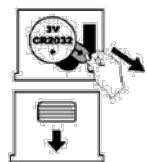

Open the battery cover at the bottom side of the scale and remove the battery safety strip. Please ensure the correct polarity of the battery (+/-).

To replace battery open the battery cover and move the battery at the recess downwards and the battery will be easy to take out. Make sure that you do not bend the contact. Insert the new battery (1 x CR 2032) and close the battery cover.

Safety guidelines:



Please care that no heavy object may fall on the scale. Otherwise, the scale may become damage.



Clean the scale only by using a slightly damp cloth. Do not use solvents or abrasive cleaning agents. Do not submerge the scale under water. All plastic parts of the scale should be cleaned immediately after contact with fat, spices, vinegar and other heavily spiced or coloured food. Avoid contact with citric acid.

2. Handling

Switch-on the scale:

As long as the scale is in off-mode, the display indicates the room temperature. To switch-on the scale push the ON/OFF-button. At first, the LCD display will show all characters for a few seconds. After the scale levelled-off, the indication will be "0 g" / "0.0 oz" / "0: 0.0 lb oz" or "0 ml" according to the setting. Now the scale is ready to use.

Units of weight:

By pushing the UNIT-button it is possible to change the unit of weight for country specific setting (g = gram / oz = ounce / lb oz = pound ounce / ml = millilitre). Please pay attention to use the scale under consideration of your country specific unit of weight.

Tare-function:

Use the ON/OFF-button to set the scale to "0 g". Place for example a bowl on the weighing platform. Upon the weight is indicated push the ON/OFF-button to set the indication again to zero. This process is repeatable until the max. capacity of the scale (5 kg) has been reached. After removal of the loading, the display indicates the total weight as negative reading.

Automatic - / manual switch-off the scale:

If the indicated weight does not change within approx. two minutes, the scale will automatically switch-off. To save the battery you can switch-off the scale manually by pushing the ON/OFF-button for about 2 seconds. When the scale is in off-mode, the display indicates the room temperature

3. Error Messages

- "Lo" = Battery is used up - Please replace the battery with the intended type (1 x CR 2032).
- "EEEE" = Overload - The weight exceeds the maximum capacity of the scale (5 kg). Please immediately remove the critical load to avoid load cell damage.

4. Technical Data

Capacity x graduation: max. 5 kg x 1 g
Dimensions: 117 mm x 117 mm x 22 mm
Batteries: 1 x CR 2032 (included)

Subject to technical modifications

5. Warranty

ADE warrants for a period of 2 years from the date of purchase that it will remedy any defects due to faulty material or workmanship free of charge by repair or replacement. When purchasing, please have the warranty coupon signed and stamped by the dealer. When making a guarantee claim, please return the scale together with the guarantee card including the reason of complaint to your dealer.



CE Declaration of Conformity
This device features radio interference suppression
in compliance with valid EC Regulation 2004/108

Note: The displayed value may be adversely affected under extreme electromagnetic influences, e.g. when using a radio unit in the immediate vicinity of the device. Once the